

CHAPTER 30 — ICE AND RAIN PROTECTION

TABLE OF CONTENTS

| Paragraph Number | Title | Chapter/Section Number | Page Number |
|--------------------------------|--------------------------------|------------------------|-------------|
| ICE AND RAIN PROTECTION | | | |
| 30-1 | Pitot-static System | 30-00-00 | 3 |
| 30-2 | Heated Pitot Tube | 30-00-00 | 3 |
| 30-3 | Engine Anti-icing System | 30-00-00 | 3 |
| 30-4 | Compressor Bleed Air | 30-00-00 | 3 |

ICE AND RAIN PROTECTION

30-1. PITOT-STATIC SYSTEM

For description, operation and maintenance of the pitot-static system, refer to [Chapter 95](#).

30-2. HEATED PITOT TUBE

For wiring diagram, refer to [Chapter 98](#).

30-3. ENGINE ANTI-ICING SYSTEM

For operational check of engine anti-icing system and removal and installation procedures for engine anti-icing switch, refer to [Chapter 96](#).

30-4. COMPRESSOR BLEED AIR

For information on compressor bleed air, refer to applicable Rolls-Royce 250 Series Operation and Maintenance Manual, 5W2 and 10W2.

